

Page 1




DIVERSIFIED HOSPITALITY

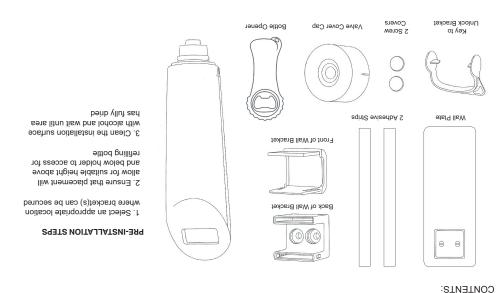



## **EcoLux Alta Dispenser Installation Steps:**

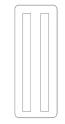


 Place adhesive strips on the back of wall plate and remove the non-adhesive backing of the tape



Apply good quality silicone adhesive in a wavy motion around the tape and press firmly to the wall for 30 seconds
 Allow a 24 hour waiting period prior to loading


Allow a 24 hour waiting period prior to loading bottles to ensure that the adhesive has set



6. Push the valve cover cap onto bottom of bottle until it clicks into place



7. Place top of bottle upright onto wall bracket

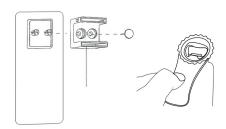


Insert back of wall bracket into place (Top of wall bracket has key holes)

- 4. Use provided caps to cover screw holes
- \*Top of outer



8. Push outer bracket into wall bracket until it locks into place\*



5. Open bottle using

provided opener tool

9. Diagram of assembled EcoLux Alta Dispenser System

## www.DiversifiedHospitality.com



## **EcoLux Alta Dispenser Bottle Replacement Steps:**



Insert provided key into holes at top of wall bracket



2. Push key into lock



And pull front of wall bracket
out



Remove used bottle from wall bracket

Page 3



5. Pull valve cover cap off used bottle (KEEP VALVE COVER CAP)



6. Open bottle using provided opener tool



7. Push the kept valve cover cap onto bottom of new bottle until it clicks into place