




Bracket Mounting Instructions

For single, double and triple wall mounted holders

Adhesive Mounting

1. Select an appropriate location where bracket(s) can be secured.
2. Ensure that placement will allow for suitable height above and below holder to access for refilling bottle.
3. Use bracket as a template with a level to mark the wall.
4. Wipe the surface and the wall with rubbing alcohol.
5. Make sure the installation surface is clean and dry.
6. Place the double stick tape pieces on the back of the bracket so tape fits without extending past the edges (see diagram).
7. Remove one side of the non-adhesive tape backing and apply as properly laid out in step 6.
8. Apply silicone gel about ½ inch from the edge and all the way around on the back side of the bracket. For ease of installation, we recommend using a larger tube of clear waterproof construction grade multi-surface adhesive (Ex. Loctite Power Grab Ultimate Crystal Clear Construction Adhesive).
9. Remove the non-adhesive backing of the tape and carefully attach the bracket to the wall.

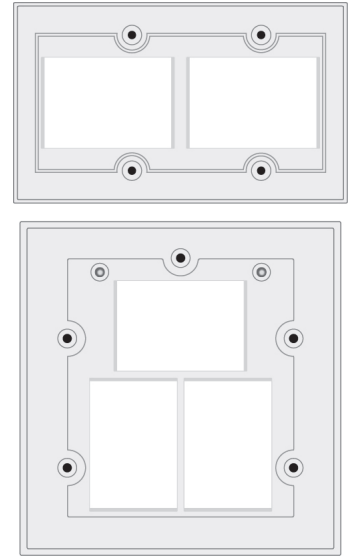

Proper tape placement diagram

Note: Although holders are suitable for most surfaces, it is not guaranteed for all. Please ensure that the dispenser is suitable for the desired surface prior to installation.

Allow a 24 hour waiting period prior to loading bottles to ensure that the adhesive has set.

Shower Locations

The recommended minimum height from floor to bottom of the holder is 40 inches. Place dispenser near the corner to reduce hazard.

Installing and Refilling Bottles

Re-filling Bottles

Use key to press downward in designated hole on the top of the unit to release swing arm. Do not turn or twist the unlocking key to avoid its damage.

Installing Bottles

1. Load the bottles. Fit the bottom of bottles into the notch first for an easier installation.
2. Secure bottles with locking swing arm.

Cleaning

For best results, clean with mild soapy water and microfiber cloths. In hard water areas, clean with vinegar to remove limescale. Harsh chemicals or abrasive cleaners should not be used.

Note: Dispensers require regular interior cleaning and sanitizing.